



WARNING

BEFORE THE FIRST USING



Install the CO2 cylinder before the first installation of the water rescue system on the paramotor


1. Open the outer protection bag (velcro), on the left (faced) bottom side of the rescue system, to find the automatic inflation mechanism.
2. Open the black fabric cover of the automatic inflation mechanism, find the CO2 cylinder and inspect it, whether it is not used or not damaged and screw it tight into the housing.
3. Close the black fabric cover around the CO2 cylinder, fold the buoy as it was and close the outer bag around attaching the Velcro.
4. Install the rescue system on your paramotor.

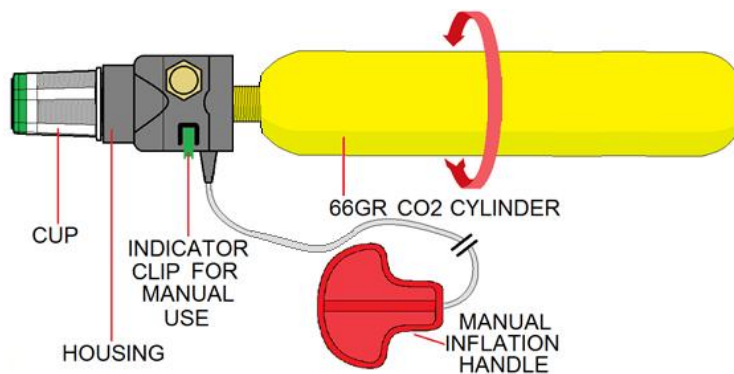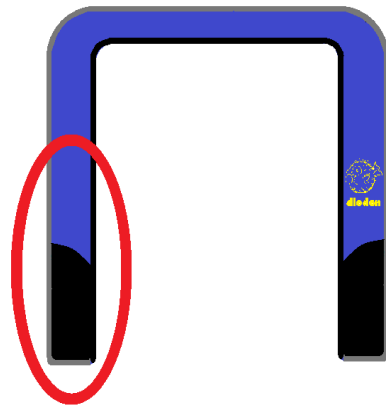

Installation of life vest

1. Put the rescue system around and behind of the paramotor seat, so that the handle of manually inflation will be on the left (faced) down side.
2. Chose at least four points on the frame, to attach the rescue system. Those must be chosen in such way to prevent the sliding upwards of the rescue system, in case of inflation. This means, the side points must be close and lower of crossing points of the frame.
3. Also take care to be installed outside of the paramotor arms and from any other obstacle, in order to be free to open properly in case of any inflation.
4. Thread the velcro straps through the loops which are created from a fixed belt round the inner and back side of the rescue system. Twist the velcro belts around the chosen fixation points at the frame and fix them tight.

MOUNTING WAY ON PARAMOTOR

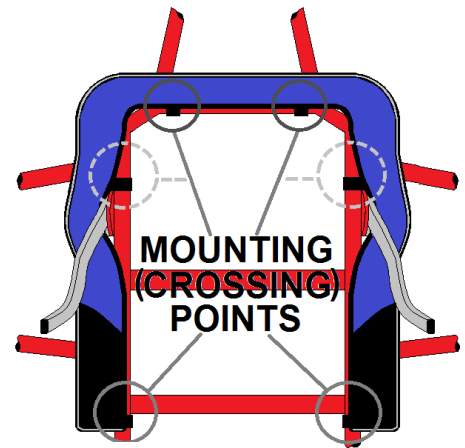

After use deflation and preparation

At the left side (faced) is the oral inflate tubing.

1. Remove the cup of it, reverse it and put the nipple of it into the hole of the tube.
2. As you keep it there, push gently the buoy until it deflates totally.
3. Wash it using clean warm water and a mild detergent only. Do not machine wash, or use dry cleaning or use stain removers.
4. Replace the CO2 (66grms) cylinder and the tablet with new one.
5. Fold the buoy as it was, place it in the protection cover and fix the edges through the velcro tape.

Warning

- . Inspect the buoy and the inflation mechanism – indicators before every use.
- . Keep the life vest in dry and cool environment. High humidity and high or low temperature, reduces its lifetime especially of the tablet.
- . Do not inflate it orally, partly or fully, before using the automatic inflation mechanism.

You can also inflate it manually by pulling the red handle